

PROGRESS

ONE

U.S.A VERSION

MOUNTING , OPERATION AND MAINTENANCE INSTRUCTIONS

ISTRUZIONI PER INSTALLAZIONE ,USO E MANUTENZIONE

INSTRUCTIONS DE MONTAGE, UTILISATION ET MAINTENANCE

**INSTALLATIONS-,BEDIENUNGS- UND WARTUNGSHANDBÜCHER
FÜR BOOTEINGENTUMER**

INSTRUCCIONES PARA MONTAJE, USO Y MANTENIMIENTO

GB	Important additional safety information	pg.2	Installation	pg.3	Wiring diagram	pg.17
	Warranty	pg.2	Operations	pg.4	Exploded diagram	pg.18
	Model classification	pg.2	Maintenance	pg.4	Parts list	pg.19
	Electric plant	pg.2	Ordering spare parts	pg.4	Lofrans sales organization	pg.20
I	Informazioni sulla sicurezza	pg.5	Installazione	pg.6	Schema elettrico	pg.17
	Garanzia	pg.5	Uso	pg.7	Disegno esplosivo	pg.18
	Identificazione del modello	pg.5	Manutenzione	pg.7	Lista parti	pg.19
	Impianto elettrico	pg.5	Modalità di richiesta ricambi	pg.7	Organizzazione Lofrans	pg.20
F	Informations concernant la sécurité	pg.5	Notice d' installation	pg.6	Schéma électrique	pg.18
	Garantie	pg.5	Utilisation	pg.7	Eclaté des pièces	pg.19
	Model classification	pg.5	Entretien	pg.7	Nomenclature des pièces	pg.20
	Branchement électrique	pg.5	Commande de pièces détachées	pg.7	Distributeurs Lofrans	pg.21
D	Wichtige Zusatzinformationen	pg.11	Einbauhinweise	pg.12	Schaltplan	pg.17
	Garantie	pg.11	Betriebsanleitung	pg.13	Ersatzteilliste	pg.18
	Modellbeschreibung	pg.11	Wartung	pg.13	Teile lista	pg.19
	Elektrische Verbindungen	pg.11	Ersatzteilbestellung	pg.13	Lofrans Händlerliste	pg.20
E	Información sobre seguridad	pg.14	Montaje	pg.15	Esquema eléctrico	pg.17
	Garantías	pg.14	Uso	pg.16	Esquema de piezas	pg.18
	Identificación del modelo	pg.14	Mantenimiento	pg.16	Despiece de los modelos	pg.19

WARNING / your windlass is not designed as a strong point to fasten your anchor rode (chain or rope) to when the boat is lying on it's anchor and sailing. The anchor rode must be fastened to a strong point such as mooring cleat, bollard or chain storage.
WARNING / do not exceed a pulling load more than the rating of your windlass. The vessel's engine be running and used to assist in the anchor recovery.
WARNING / always install the properly rated circuit breaker to protect the electric plant and electric motor from overheating and damages.
WARNING / when not in use be sure to keep the anchor windlass circuit switch in the **OFF** position to prevent accidental engagement of the windlass.
WARNING / always keep your hands, feet and fingers clear of an operating windlass. If a jam occurs use extreme caution and turn off the windlass circuit before attempting to clearing the anchor rode.
WARNING / do not use the windlass for different purposes it was designed for.

WARRANTY

Lofrans s.r.l. warrants its products for a period of two (2) years from the date of purchase against defects in materials or workmanship, under normal use and service. Any part which proves to be defective in normal usage during that two years period will be repaired or replaced by Lofrans. This warranty is subjected to the conditions listed below.
 Seals, electric motors, electrical equipment, electronic controls are warranted for a period of one (1) year.
 Lofrans' liability shall be limited to repair or replacement of the part defective in materials or workmanship.
 Lofrans shall not be liable in any way for failures due to use of products in applications for which they are not intended, improper installation, misuse, incorrect maintenance, corrosion, normal wear and tear, discoloration and unauthorised alteration of the product, conditions that exceed the product's performance specifications.
 The claim of warranty must be promptly notified in writing, to Lofrans or Lofrans' authorised distributor, providing proof of purchase. Repair will be under taken upon return of the defective part, freight prepaid to Lofrans or Lofrans authorised distributor. Lofrans or its authorised distributor will not be responsible for any shipping charges or labour cost associated with any warranty claims. Lofrans shall not be liable for consequential damages to yachts, equipment or other property or persons due to use or installation of Lofrans equipment. Implied warranties are limited to the life of this warranty. All incidental and/or consequential damages are excluded from this warranty. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusions may not apply to you.
 Lofrans reserves the right to discontinue the warranty in case the windlass is controlled by not suitable electric accessories and/or in case of non installation of a proper circuit breaker on the windlass electric line.

MODEL CLASSIFICATION

FOR YOUR OWN SAFETY PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLING OR OPERATING YOUR WINDLASS. Fill in this form to obtain a complete classification of the installed model.

MOTOR	700 Watt 12 Volt	<input type="checkbox"/>	700 Watt 24 Volt	<input type="checkbox"/>
	1000 Watt 12 Volt	<input type="checkbox"/>	1000 Watt 24 Volt	<input type="checkbox"/>
CHAIN	Ø8 iso-3 Din.768 Ø5/16" G40-BBB	<input type="checkbox"/>		
ROPE	Ø14 - 16 mm Ø9/16" - 5/8"	<input type="checkbox"/>		

PURCHASE DATE & PLACE

NOTES

SERIAL NUMBER

ELECTRIC PLANT

Check that the motor tension corresponds to the electric plant on board. The following table suggests the minimum battery feeding the windlass, the minimum cable section and the proper circuit breaker to install on the power line.

MOTOR	BATTERY	CABLES SECTION	CIRCUIT BREAKER
700 Watt 12 V	100 Ah	25 mm ² 3 AWG	70 Amps
700 Watt 24 V	70 Ah	16 mm ² 4 AWG	35 Amps
1000 Watt 12 V	150 Ah	35 mm ² 2 AWG	100 Amps
1000 Watt 24 V	90 Ah	25 mm ² 3 AWG	70 Amps

If the windlass is fed by an inferior battery, the performances will be worse and the battery will be subject rapidly to wear and tear. We recommend to use excellent quality cables, insulated and heat resistant. It is important underline the cables section should be increased of 30% - 50% approx., if the length of the extended cable, positive and negative, is greater than 10 mts. or 29' length. The cables connected to the electric controls, shown on the wiring diagram as a thin line, should have a section of 1.5 mm² or 16 AWG approx.

Circuit breaker informations referring only to LOFRANS' circuit breaker so they could be incorrect for other circuit breakers.
 The circuit breaker protects from very dangerous short circuits, protects the windlass motor, avoiding damages due to anomalous absorption and interrupts the tension, when desired. The circuit breaker must be installed in a dry, accessible and visible position. For safety reasons we recommend that the windlass and remote controls are isolated during navigation and reactivated when anchoring. install the control box preferably in a dry place on board. We recommend to install at least two remote controls to operate the windlass in case one of them gets damaged.

For protection of electric remote controls, it will be necessary to install a circuit breaker of 5 Ampers.
 We recommend You to use original LOFRANS' components only, which are designed for sea water purpose. LOFRANS equipment conforms to European Directives, products are CE approved.

INSTALLATION


CB

Check if the windlass is complete in every parts, if any parts is missing or damaged, please contact your dealer.


TOOLS AND MATERIALS REQUIREMENTS

Drill \varnothing 5 mm (3/16"), Spanner 10 mm A/F - 13 mm A/F
Jig Saw, Power Drill, Silicone Sealant

The electric motor of the windlass is able to operate under spray conditions; however, if submerged, it could be irreparably damaged.

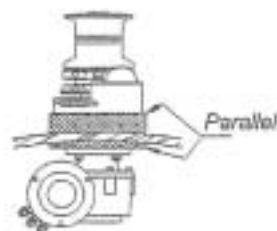

The PROGRESS model is made by a top part, including drum (274), gipay (512) and base (518), and an under deck part, the gearbox (305) and electric motor (315). Check there are no under and over deck obstructions. Be sure there is ample room to enable you to use the handle (272). In order to facilitate maintenance operations Lofrans suggests to install the windlass on a removable panel fixed on the deck by bolts. Standard maximum deck thickness is 40 mm (1 5/16"); for deck exceeding this thickness, please consult your dealer. If the deck is too thin or inadequate, it will be necessary to use a backing pad (plywood, timber) of sufficient dimensions to spread the stress imposed during recovery of chain. To avoid electrolysis problems, do not use stainless steel pad as backing pad. For boats of steel or aluminium, it is very important that top and under deck parts are insulated from the deck with a non conductive gasket. It is essential that top and under deck parts are fitted parallel; in some cases a mounting pad may be necessary. Incorrect alignment may result in extra load being imposed on the motor causing loss of power and overheating with excess current consumption.

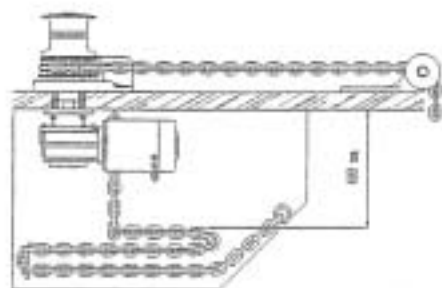

The windlass must be placed when the chain locker has the max depth. The top part must be located so that the chain runs parallel to the deck and turn around the gipay with a rotation of 180° approx. Ensure the chain locker is of sufficient capacity to store all the chain and leave a minimum of 400 mm (16") between underside of the deck and the top of the heaped chain. When the position of the windlass has been set, drill the necessary holes, using the template we supply. Separate top and under deck part loosening the nuts (227) from the studs (262) and seal, using a good quality silicone sealant, the bottom of the base and around the studs. Place the top part on the deck.



Under deck part may be oriented in the most suitable of four positions. Check that the electric motor does not obstruct the run of the chain into the locker. Join the under deck part to the top part inserting the key (264) of the main shaft into the key way of the gearbox. Tight the nuts on the studs. Join the cables to the electric motor. Introduce the chain into the gipay, operate the "UP" switch of the foot switch or remote control and the chain will automatically be fed into your locker. Take care to keep hands and feet well clear of incoming chain. If the windlass runs in wrong direction, change over M1 and M2 cables at the control box. After using the windlass, we strongly recommend that the nuts are checked again to ensure they are well tightened.

WARNING ! = Do not approach with hands or feet near the gipsy and chain , when operating.

WARNING ! = When the windlass is not in use or before use the handle , turn the windlass off at the main switch.

WARNING ! = Engage the chain stopper after anchoring. Windlass must not be used as safe means securing anchor in bow fitting. Anchors should be independently secured to prevent accidental release .

WARNING ! = Be sure the clutch and the chain stopper are well engaged before boating.

Gipsy Clutch Operation - Low Profile

Gipsy is connected to the main shaft (514) by a clutch , items (511 and 513).

To disengage the clutch insert the handle into the lock nut (508) and turn counter clockwise. Then insert the handle into the star shaped slot on the gipsy cap (519) and loosen it. To engage the clutch again tight the gipsy cap until you cannot move the handle any more. Anchor and/or chain provide resistance during the tightening process. Then engage the lock nut.

Gipsy Clutch Operation - Standard

Gipsy is connected to the main shaft (282) by a clutch , items (275 and 513).

To engage the clutch insert the handle supplied into the clutch nut (273) tighten it turning clockwise until you cannot move the handle any more. To disengage the clutch loose the clutch nut turning counter clockwise.

Raising The Anchor

Start the engine of the boat. Be sure that the clutch is well engaged. Draw out the handle from the gipsy cap.

Push the button "UP" of the foot switch or remote control. Do not use the windlass to pull the boat to the anchor.

Release the button "UP" to stop the manoeuvre.

When you haul the last metres of the chain , pay attention to the anchor, which may damage the bow of your boat.

If case the anchor be stranded and the Lofrans circuit breaker gets released , wait some minutes before put it back into service and try the manoeuvre once more. Should the circuit breaker stop again , we suggest to fix the chain to a cleat or bollard , then use the boat engine to break the anchor loose.

For your safety we strongly recommend to turn OFF the circuit breaker and engage the chain stopper during navigation. Reactivate the circuit breaker and disengage the chain stopper before anchoring.

Lowering The Anchor

When you wish to lower the anchor very quickly , it is necessary disengage the clutch. The gipsy may freely run on its shaft and release the chain into the water. The chain fall can be controlled tightening the gipsy cap with the handle. At the end of the operation engage the clutch.

Under usual conditions , we suggest to lower the anchor electrically , pushing the button "DOWN" placed on the remote control or foot switch.

You will have always a perfect control of the manoeuvre , which can be interrupted any moment releasing the button "DOWN" .

Once anchored , we suggest in order to reduce the windlass load , to use a chain stopper and fix the chain with a rope to a strong point as a cleat.

Use Of The Drum Independently From The Gipsy

Stop the run of the chain , fasten it to a strong point as a chain stopper or similar. Disengage the clutch. Turn clockwise around the drum with two legs of rope. Keep the end of rope. Push the button "UP" , recovering the rope at the same time. Engage the clutch at the end of the operation.

Raise The Anchor In Case Of Emergency

Insert the emergency handle in the clutch nut or gipsy cap. Turn clockwise , overcoming a strength due to the spring (301). As there is no ratio , please keep in mind in case of deep anchoring the stress will be hard.

MAINTENANCE

WARNING ! = Before operate turn the windlass off at the main switch and remove with attention the chain from the gipsy .

A correct and periodic maintenance operation is essential for the best efficiency of your windlass. At least once every month remove the salt layer , which forms periodically on the outer casing , to avoid electrolysis problems which could prejudice the windlass performance. Wash with a fresh water and clean all the surfaces , particularly in the most hidden points , where salts deposits. We recommended , at least once every six months , to disassemble the windlass gipsy following the instructions below.

Standard version : with the handle unscrew (273) , remove (274, 275) then unscrew (515) , remove (516 and 517). Remove (275, 512) and extract (513).

Low profile version :with the handle unscrew (508) , remove (508,510) , unscrew (518) , unscrew (515) , remove (516 and 517).

Remove (511,512) and extract (513).

Clean and check all the parts , spray oil with CRC 3087 "LONG LIFE" or WD40. Watch if there are no electrolysis traces and grease the main shaft thread.

After a long inactivity period , the electric motor could run slowly. We recommend to check and clear the brushes and replace it if necessary.

We strongly recommend to separate , at least once every year , the windlass from the deck to clean and remove the salt layer under the base.

The gearbox is proper filled with SAE 90 long life oil. If there is a leak of oil from the body , it will be necessary to disassemble and replace the seals.

For this purpose , it is available a complete set of seals . At the beginning and at the end of the season , check the motor and control box, removing eventual residues and covering the terminals with grease .

ORDERING SPARE PARTS

To identify a windlass spare parts see the spare part list. When ordering spare parts , please specify for the PROGRESS model the code B.16.102A , give us a complete model classification , the serial number , the item number and the quantity.

Contact the nearest authorised LOFRANS' distributor or directly LOFRANS' S.r.l. fax++ 39 (039) 2004299 .

REGISTRATION CARD

Privacy Notice : The data stored will be used from Lofrans to send the information required , and they will not be given to third parts. You can access your data and correct , integrate or delete in every moment.

Dear Sir

Lofrans offers for the windlass sold from 2 May 2002 a 2 years warranty. In order to get this warranty you need to register your product providing the serial number. You will receive from Lofrans a personal warranty certificate plus a customer ID which allows to you to modify your data in case of variations. The registration of the product may be done by on-line through the web site www.lofrans.it under "Product Registration" , or sending to the fax number +0392004299 this registration card fully completed. The serial number of the product is indicated by a label put on the body or the base of the windlass. The code is made by two letters first plus a number (e.g. AR 1000)

FIRST REGISTRATION

First&Last Name*

Address*

City*

Nation*

E-mail*

Product serial number*

(*necessary fields)

IN ORDER TO GIVE YOU A BETTER SERVICE PLEASE FILL THIS FORM. THANK YOU FOR YOUR CO-OPERATION.

WHICH KIND OF BOAT DO YOU OWN? Sailboat Motorboat

WHAT IS YOUR BOAT BRAND?

HOW MANY METERS (FEET) IS IT LENGTH? Under 9 (Under 27') 9 to 11 (27' to 33') 11 to 13 (33' to 49') 13 to 18 (33' to 54') 18 to 24 (54' to 72') Over 24 (Over 72')

WHICH IS THE PREVALENT USE OF YOUR BOAT? Recreational Charter Work

HOW MUCH TIME DO YOU USE YOUR BOAT EVERY YEAR? Under 2 2 to 6 Over 6

WHICH KIND OF ANCHOR DO YOU USE? Danfort CQR Delta Bruce Hall Other

WHO DID THE INSTALLATION OF YOUR WINDLASS? Boatbuilder A qualifier Myself


WHICH OF THESE CONTROLS DO YOU USE OR PLAN TO USE TO OPERATE THE WINDLASS MOSTLY? Footswitch Rocker switch Hand-held remote Radio control

DID YOU RECEIVE THE INSTRUCTIONS MANUAL? YES NO

HOW DID YOU KNOW THE LOFRANS PRODUCTS? Boatbuilder Dealer Advertisement Friends Internet

FOR WHAT REASON DID YOU CHOOSE OUR PRODUCT MAINLY (JUST ONE PLEASE)? I found it on Price Quality Friend's Feature Other

I AUTHORIZE LOFRANS TO SEND ME DOCUMENTATION ABOUT NEWS , TECHNICAL INFORMATION, MARKETING COMMUNICATIONS YES NO

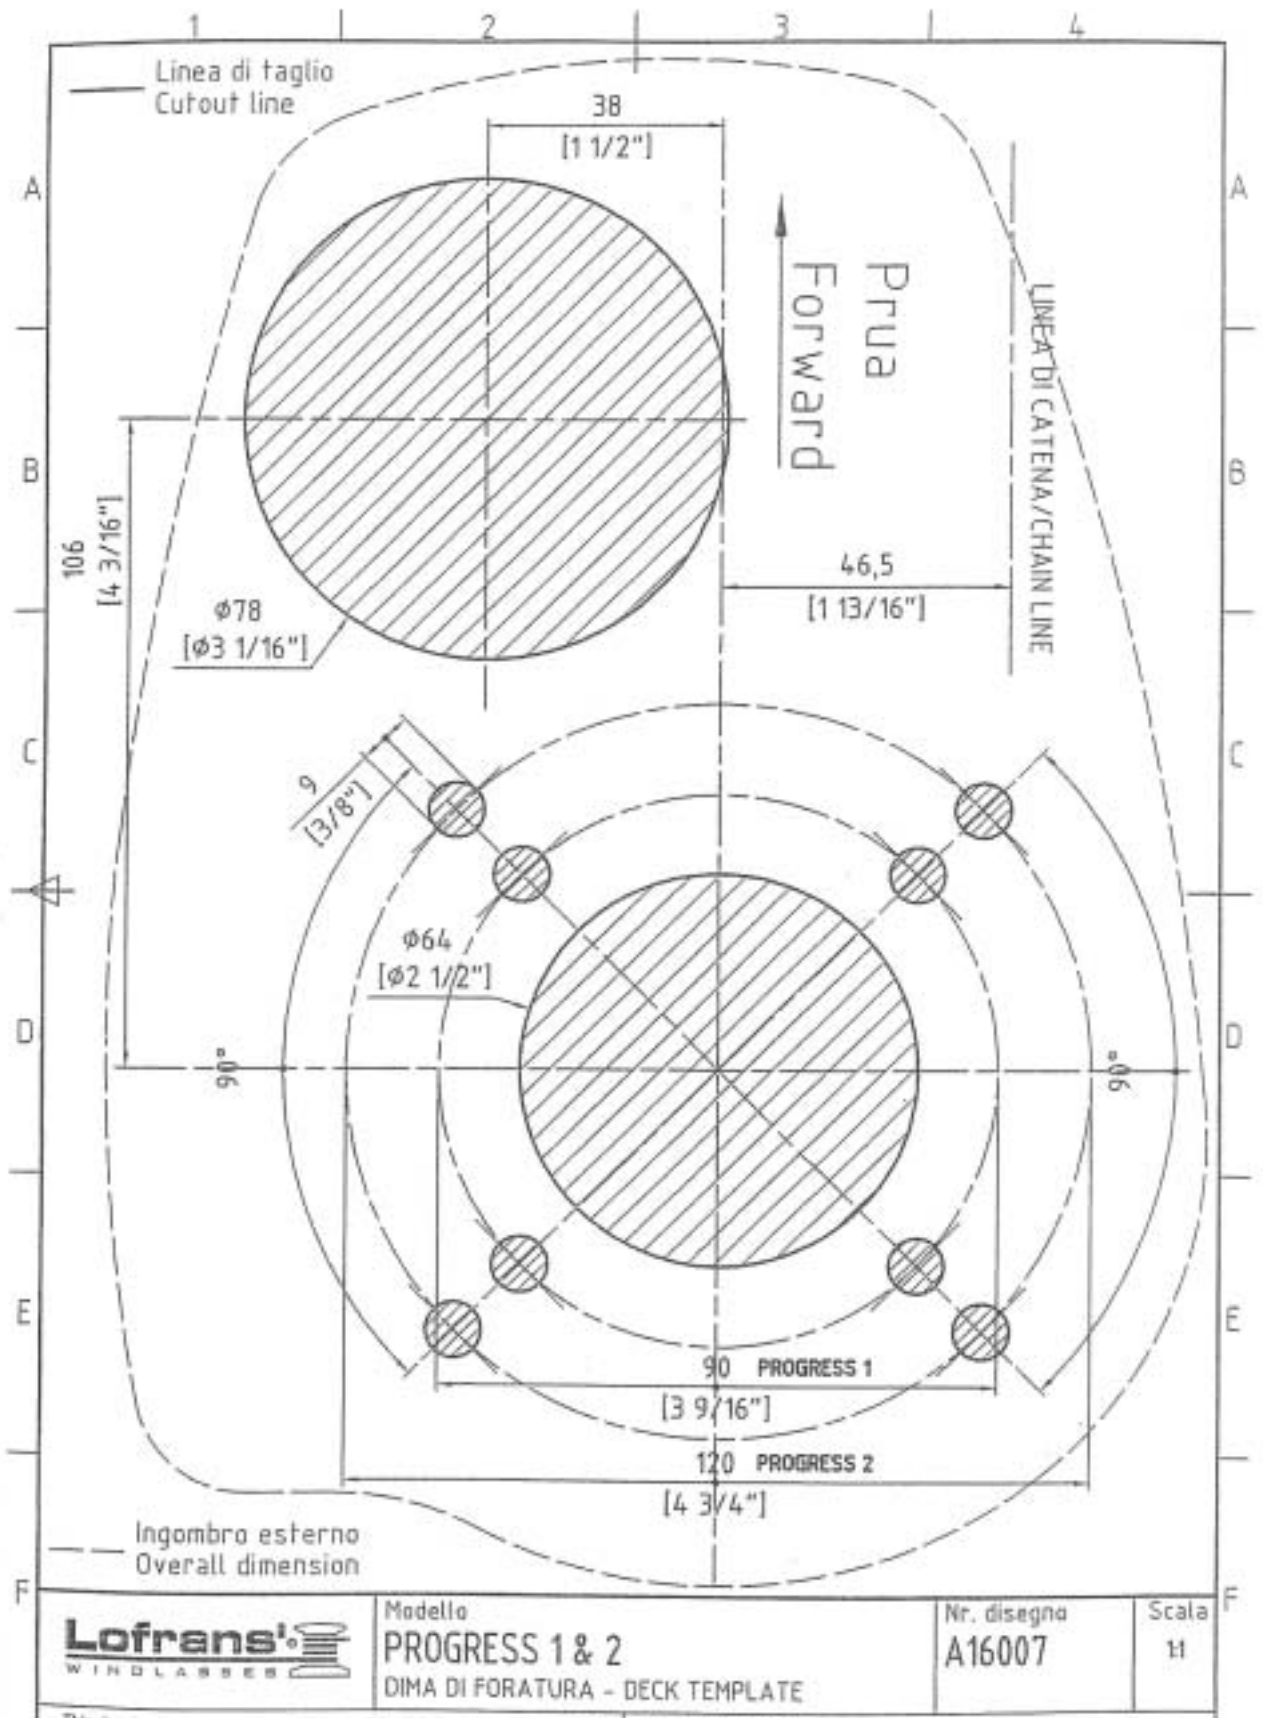

Lofrans
WINDLABBER



Modello
PROGRESS 1 & 2
DIMA DI FORATURA - DECK TEMPLATE


Nr. disegno
A16007

Scala
1:1

REMOTE CONTROL VEGA

ROCKER SWITCH TYPE C

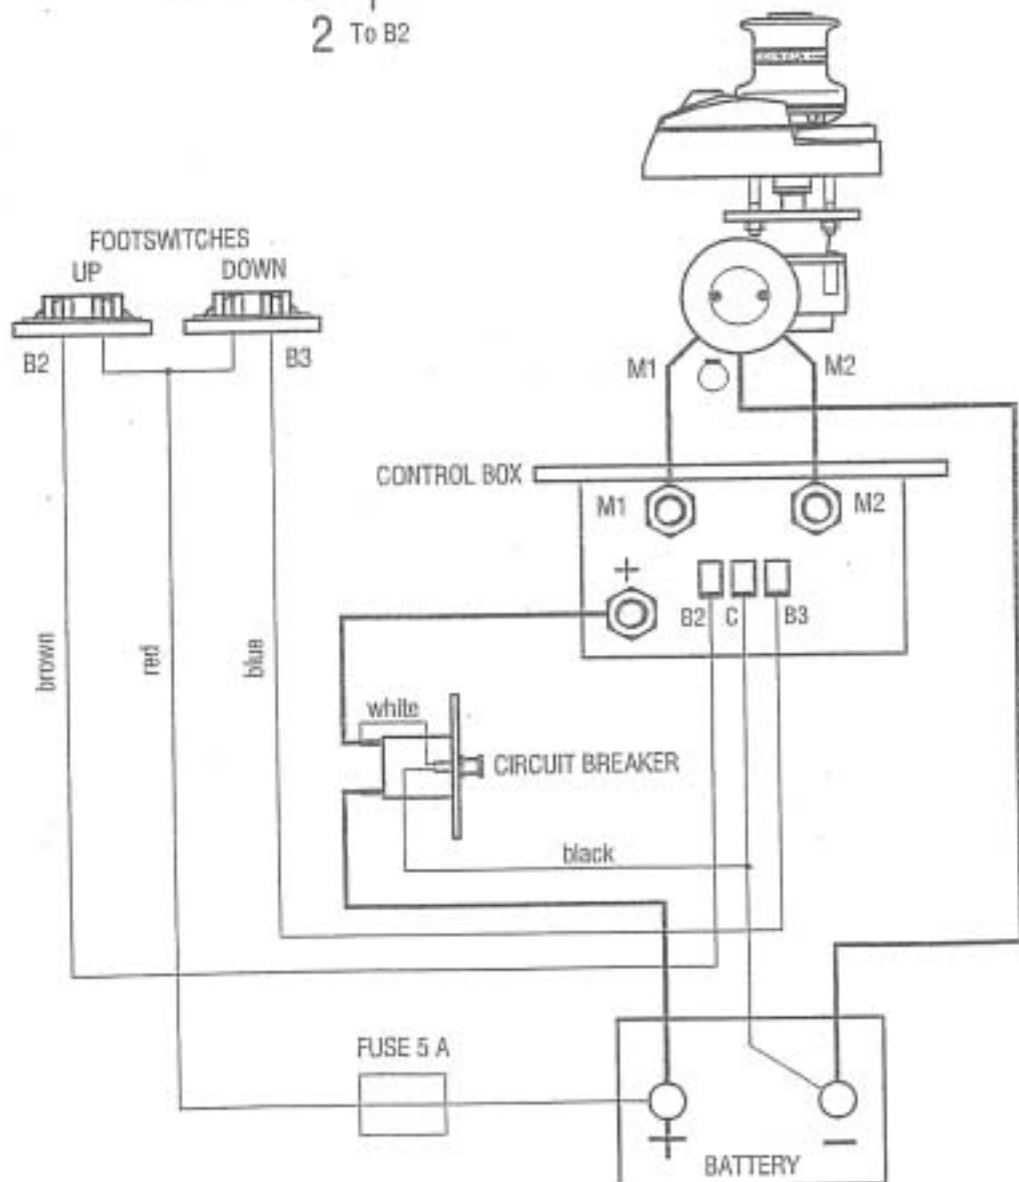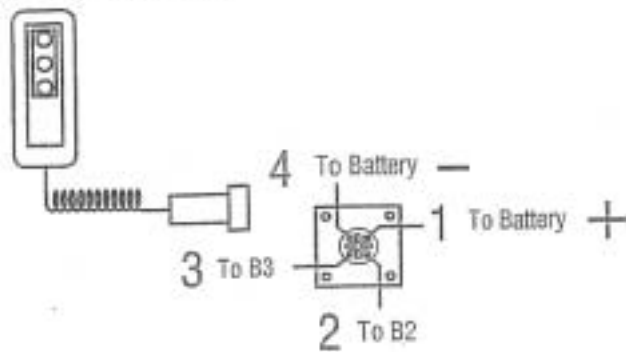

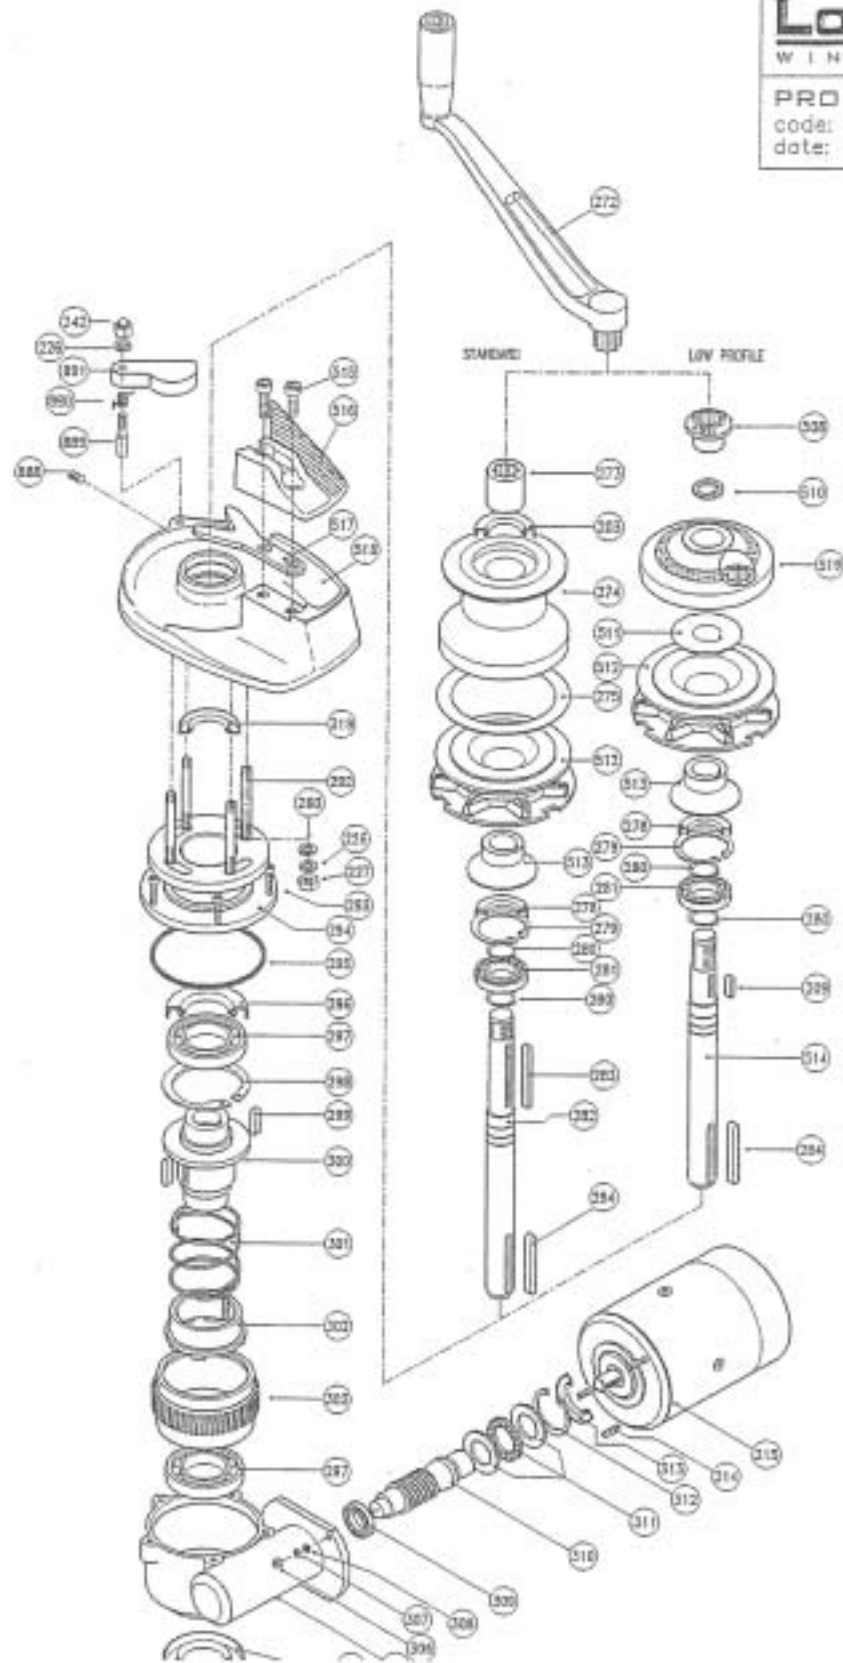

LOFRANS' SALES ORGANIZATION

ARGENTINA
DOMINGO P. PEDRINI S.A.I.C.
9 de Julio 189 - 1640 S. Fernando - Bs.As.

AUSTRIA
GASCHERL GmbH
Erlanggrund 56 - 6071 Hart

HARTMANN
Höherstrasse 5
A - 6371 Hart a. Badenwei

BAHRAIN - ARABIAN GULF
2000 MARINE STORES
P.O. Box 26027
Manama

BELGIUM
HUNTER N.V.
St. Bernadussteenweg 258-264
2090 Hobekein (Antwerpen)

CANADA
REXORD MARINE ENTERPRISES Ltd.
8194 Gabeau Street
Vancouver B.C. V5X 3E3

CANARY ISLANDS
NORDEST - Roberto Orjuel
Av. de Comis 10431
38080 Santa Cruz de Tenerife

CARIBBEAN
BUDGET MARINE N.Y.
P.O. Box 434
258 Waterfront Road - Cole Bay - St. Maarten

CROATIA - SLOVENIA
UNIMAR S.J.L.
Via Valentin 25
34134 Trieste-Italy

CYPRUS
MERCURY OWNERS COMPANY LTD.
15, Franklin Roosevelt Av. - Diplomatiko House
P.O. Box 409 - Larnaca

DENMARK
PALBY MARINE A/S
Bommetorvevej 41 Skelde
DK 7100 Vejls

EGYPT
MAPSD Marine Propulsion and Supply S.A.E.
11(A) Mohamed Aziz St.
Zamalek - Cairo

ENGLAND
E.C. SMITH & SONS LTD.
Unit H & J Kingsway - Industrial Estate, Kingsway
Luton Beds. LU1 1LP

FINLAND
OY MARTIN AB
P.O. Box 46
00211 Helsinki 21

FRANCE
ACCASTILLAGE BERNARD
600 Avenue Saint Exupéry
06210 Mandelieu

ANNOT S.A.
41, Quai Dangery-Trouin - Boite Postale 106
35407 Saint-Malo

ELECTRIC-AUTO-YACHTING S.A.R.L.
6, Rue de la Paix
13001 Marseille

RE.YA.
144, Avenue de la Focline
06100 Cannes-La Bocca

SEMI S.A.
Rue Alain-Coles
2F-Port de Moulin Blanc - Boite Postale 243
25272 Besol

VEHL DIFFUSION MARINE
Z.I. Toulon EST
Toulon Cedex 9

GERMANY
S.V.S.
Görschkirchener St. 25
28195 Bremen

SWEDEN
ALEX MARINE
S Lanchans Gt.
165 31 Pitaval

HONG KONG
ELCO MARINE & ENGINEERING LTD.
28 Via Fung Street
Unit 6, G/F - Lincoln Centre - Fooking
New Territories HONG KONG

NETHERLANDS
VETUS DEW OUDEN N.V.
Fokkerstraat 571
3125 Bel Schiedam

HUNGARY
MINIKER Co.
Oros Utsa 3
H 1026 Budapest

ISRAEL
ATLANTIS MARINE LTD
147 Kibor Aladim
109 Hayeron St. - Tel Aviv 63450

LEBANON
MARINE DIFFUSION
B.P. 8389 Beyrouth

MALTA
INTERNATIONAL MARINE CENTRE
Tortibus Palace
Tas-Salvador Street Malta

NEW CALEDONIE
LIMOUSIN MARINE
70, Rue de Port Despoitres-B. P. 701
Noumea

NEW ZEALAND
EUROMARINE
P.O. BOX 10144
Dominion Road-Auckland 10

NORWAY
TELAND CONTROL A.S.
Ref Holmen St. 18 - Postboks 2000 Toyen
0608 OSLO 6

POLAND
MAZURA
11 214 Galicy 2

PORTUGAL
NAUTICOR
Rua Bartolomeu Dias 172 A/D
1400 Lisboa

SINGAPORE
AMERICAN MARINE (S) PTE LTD.
No. 25 Jalan Torneo
Jurong Town Singapore 2291

SOUTH AFRICA
MANEX & POWER MARINE (PTY) LTD.
19 Dorsetville Street - P.O. Box 182
7420 Pieterden Elzand-Cape Town

SPAIN
LA INDUSTRIAL VELERA MARSA S.A.
Mercedes 8 y 10
08014 Barcelona

IMMASA S.A.
Avda. Zaragoza 73/75
17200 Sant Feliu de Guisclat (Girona)

SWEDEN
ITALNORDIC
Föringsvägen - Box 12
440 90 Heron

TAIWAN
GENCO MARINE LTD.
Suite 6F 5 169 Min Shun East Road, Sec.5
P.O. Box 87-606 - Taipei Taiwan 10537

TURKEY
CARRI DENIZCILIK San.Ve.Tic.Ltd. 50
Cokuk sok kenseler yolu mah sarayi sitesi 56
Istanbul Tuzla - Istanbul

U.S.A.
INTRA CORPORATION
30 Samuel Becket Blvd
New Bedford Industrial Park - New Bedford
Massachusetts 02745